

What Can An Operator See?

The Importance of Exclusion Zones

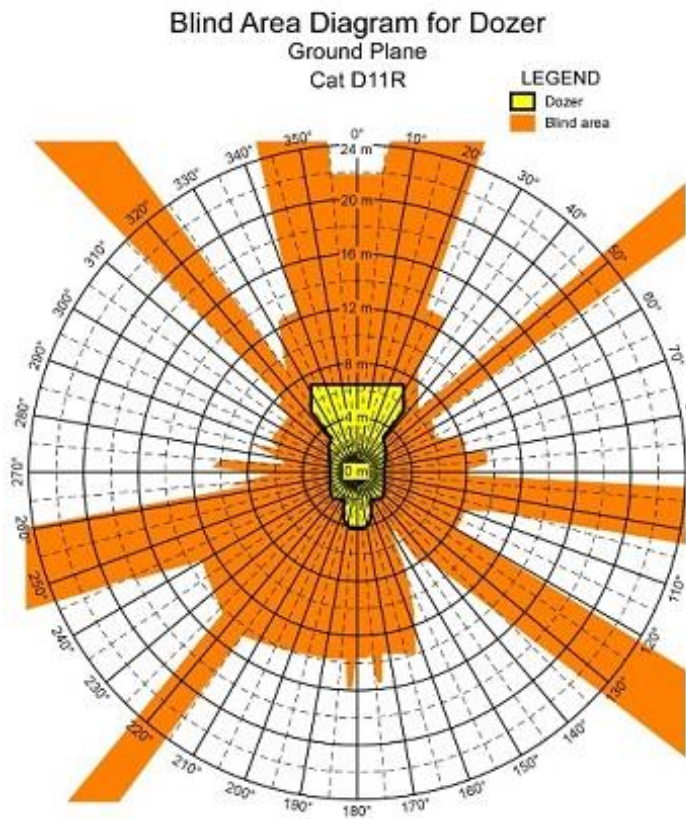


Diagram 1

Diagram 1 depicts the area at ground level that cannot be seen by the operator of the dozer, while Diagram 2 depicts the 1.5m plane, the elevation at the top of the head of the shortest human expected in the work area, the area in which they would not be seen.

Visibility directly behind the tracks of the dozer at ground level commences at 14 metres and reduces to 8 metres when the object is 1.5m in height.

This serves to highlight the lack of visibility from large equipment and the need for exclusion zones.

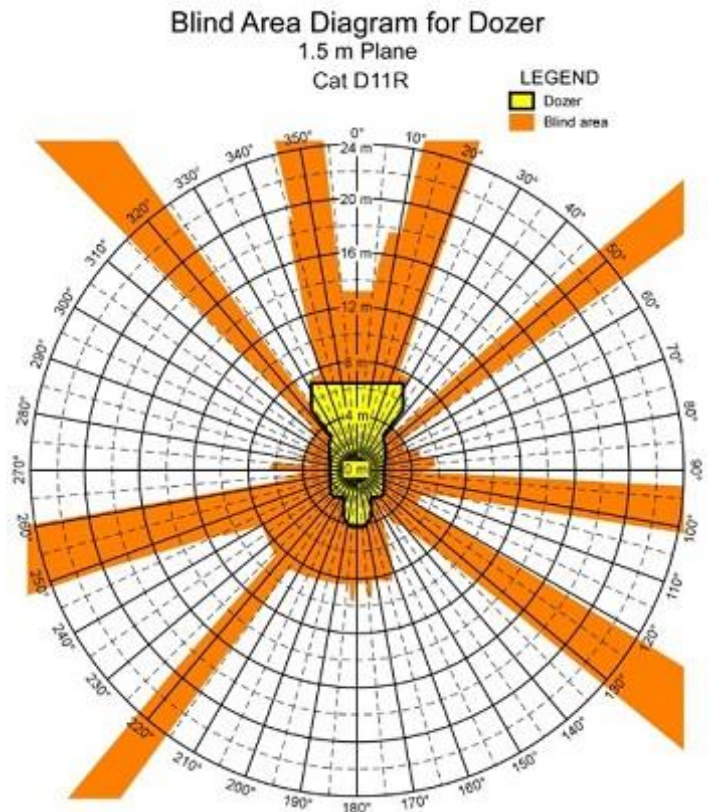


Diagram 2